HOME DECORATORS collection®

BF-24873 PROVENCE 2 DOOR HUTCH 39″HX51″WX15″D

INV#08235

ASSEMBLY INSTRUCTIONS

Made In China

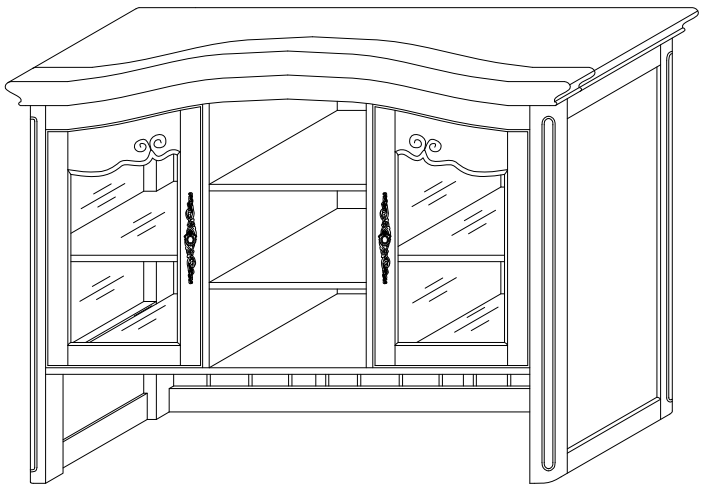

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A FRONT PANEL-1PC	B  TOP PANEL-1PC	C LEFT SIDE PANEL-1PC
D  RIGHT SIDE PANEL-1PC	E  LEFT STAND PANEL-1PC	F  RIGHT STAND PANEL-1PC
G  BOTTOM PANEL-1PC	H DOWN ADORNING-1PC	I  LEFT DOOR-1PC
J  RIGHT DOOR-1PC	K  MIDDLE SHELVES-2PCS	L  SHELVES-2PCS

M  BACK PANELS-2PCS	N REAR PANEL GUIDES-2PCS	O  MIDDLE BACK PANEL-1PC
P EVA MAT-4PCS	Q  DOWELS-2PCS	R  SMALL MAGNETS-2PCS
S  FEMALE MAGNETS-2PCS	T 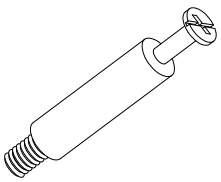 CAM-BOLTS-23PCS	U  CAM-LOCKS-23PCS
V 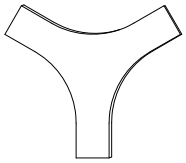 CAM-TOOL-1PC	W HANDLES-2PCS	X  SCREWS-2PCS
Y 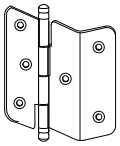 HINGES-4PCS	Z 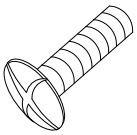 SCREWS-2PCS	A1  SHELF SUPPORTS-16PCS
B1 SCREWS-34PCS	C1  SCREWS-24PCS	D1 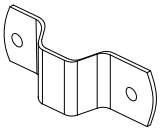 HOOKS-4PCS

E1  SCREWS-14PCS	F1  HANGERS-4PCS	G1 PLATES-2PCS
H1  SCREWS-4PCS	I1 PLATES-2PCS	

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: ● UPON OPENING THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

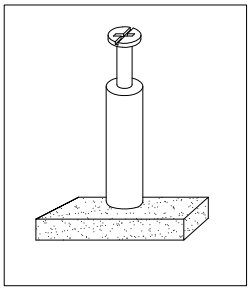

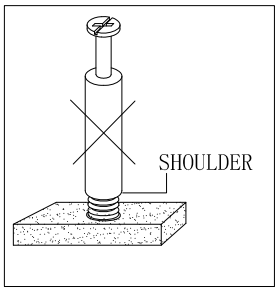

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

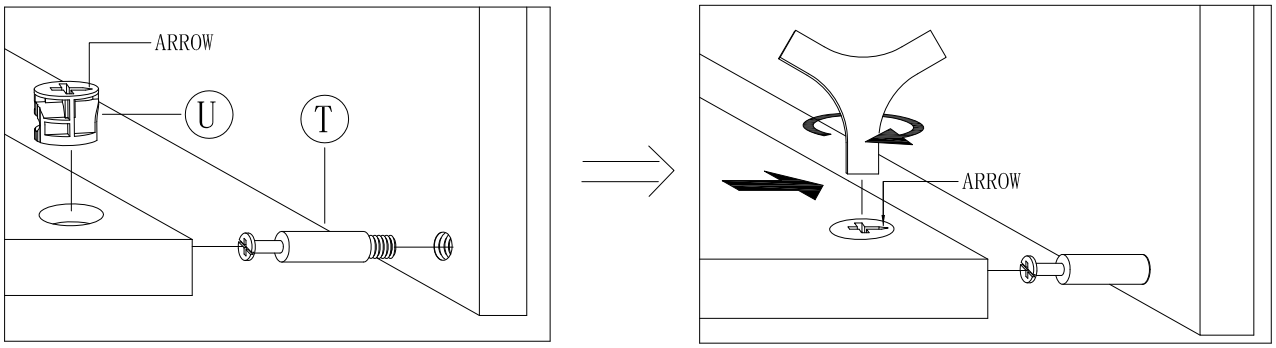

NOTE: ● THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

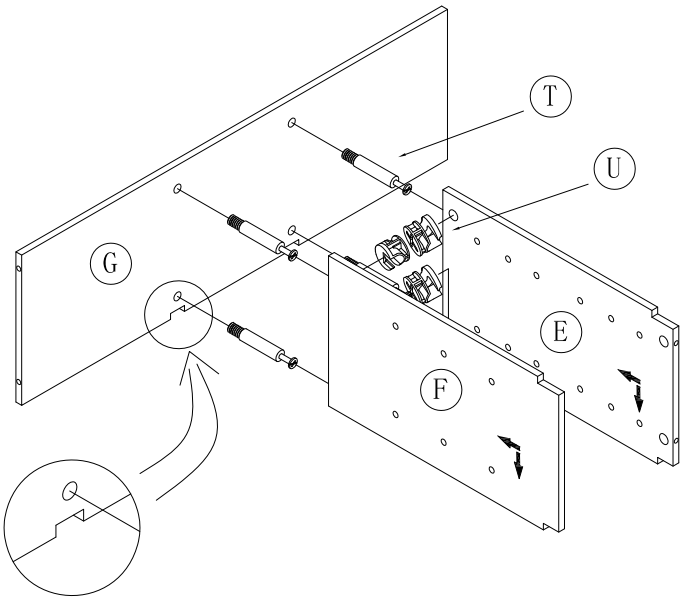

1). ASSEMBLE THE BOTTOM PANEL(G).

- ROTATE THE 4 CAM-BOLTS(T) INTO THE HOLES IN THE BOTTOM PANEL(G).
- PLACE CAM-BOLTS(T) INTO THE HOLES IN THE STAND PANEL(E/F) AND ATTACH USING 4 CAM-LOCKS(U).

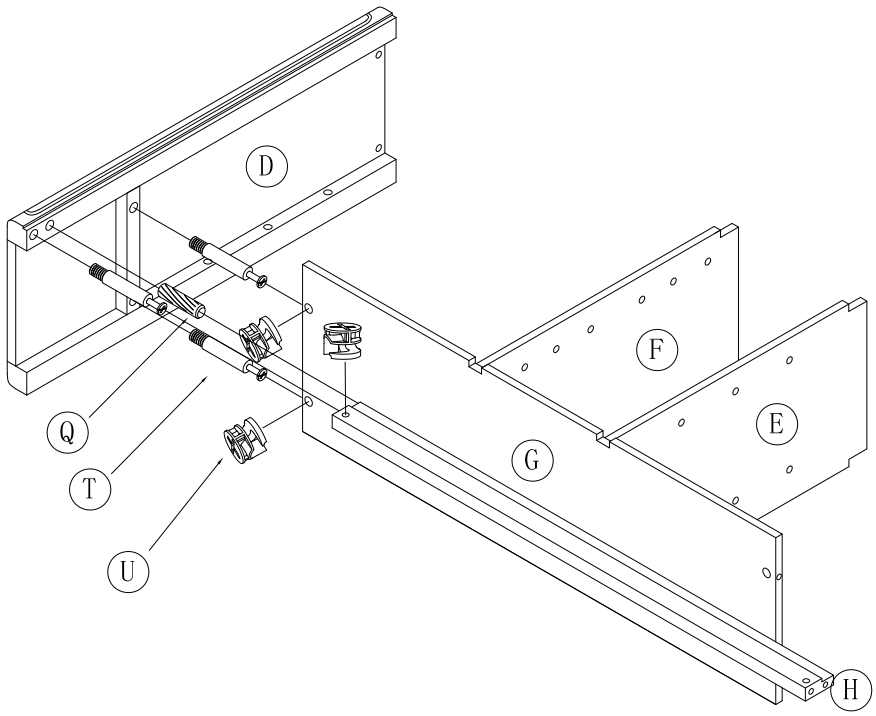

2). ASSEMBLE THE RIGHT SIDE PANEL(D).

- ROTATE THE 3 CAM-BOLTS(T) AND INSERT DOWEL(Q) INTO THE HOLES IN THE RIGHT SIDE PANEL(D).
- PLACE CAM-BOLTS(T) INTO THE HOLES IN THE PANEL(G/H) AND ATTACH USING 3 CAM-LOCKS(U).

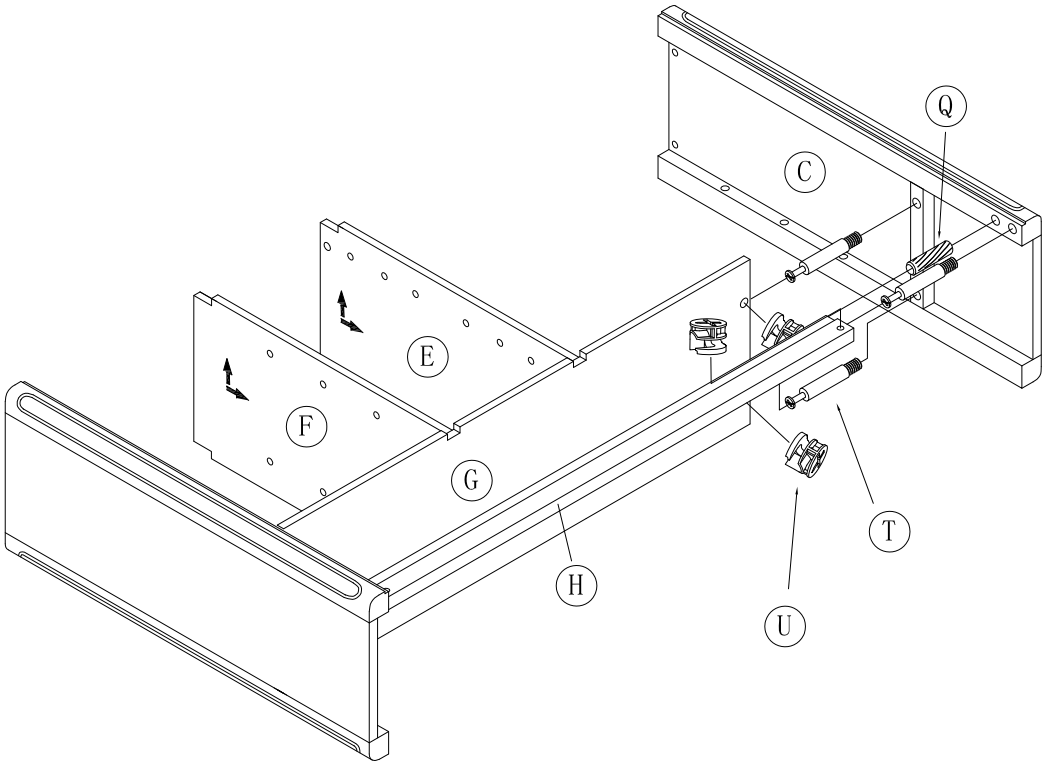

3). ASSEMBLE THE LEFT SIDE PANEL(C).

- ROTATE THE 3 CAM-BOLTS(T) AND INSERT DOWEL(Q) INTO THE HOLES IN THE LEFT SIDE PANEL(C).
- PLACE CAM-BOLTS(T) INTO THE HOLES IN THE PANEL(G/H) AND ATTACH USING 3 CAM-LOCKS(U).

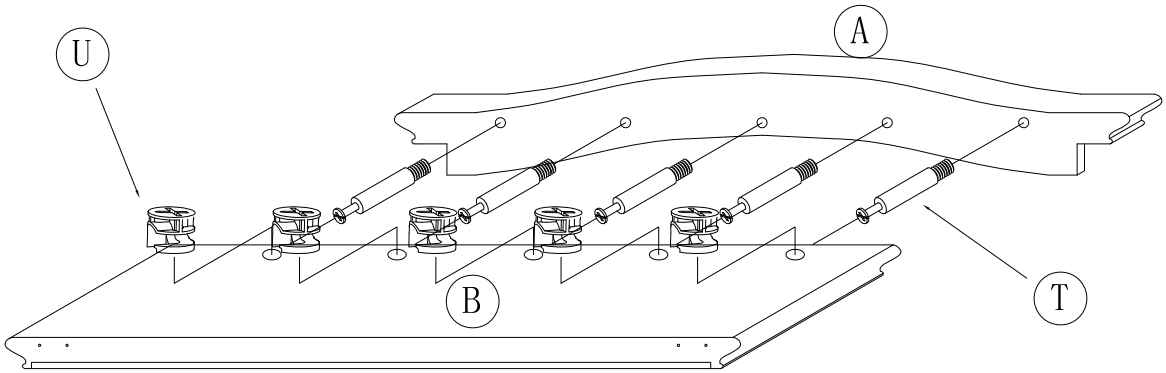

4). ASSEMBLE THE FRONT PANEL(A).

- ROTATE THE 5 CAM-BOLTS(T) INTO THE HOLES IN THE FRONT PANEL(A).
- PLACE CAM-BOLTS(T) INTO THE HOLES IN THE TOP PANEL(B) AND ATTACH USING 5 CAM-LOCKS(U).

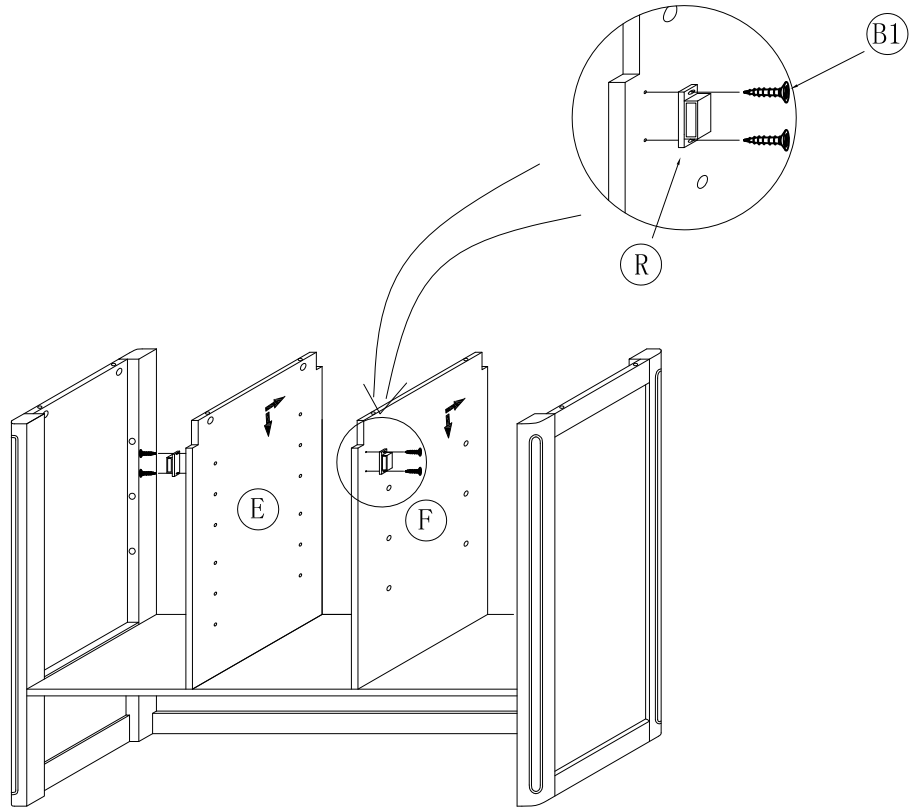

5). ASSEMBLE THE SMALL MAGNETS(R).

- ATTACH THE 2 SMALL MAGNETS(R) TO STAND PANEL(E/F) USING 4 SCREWS(B1).

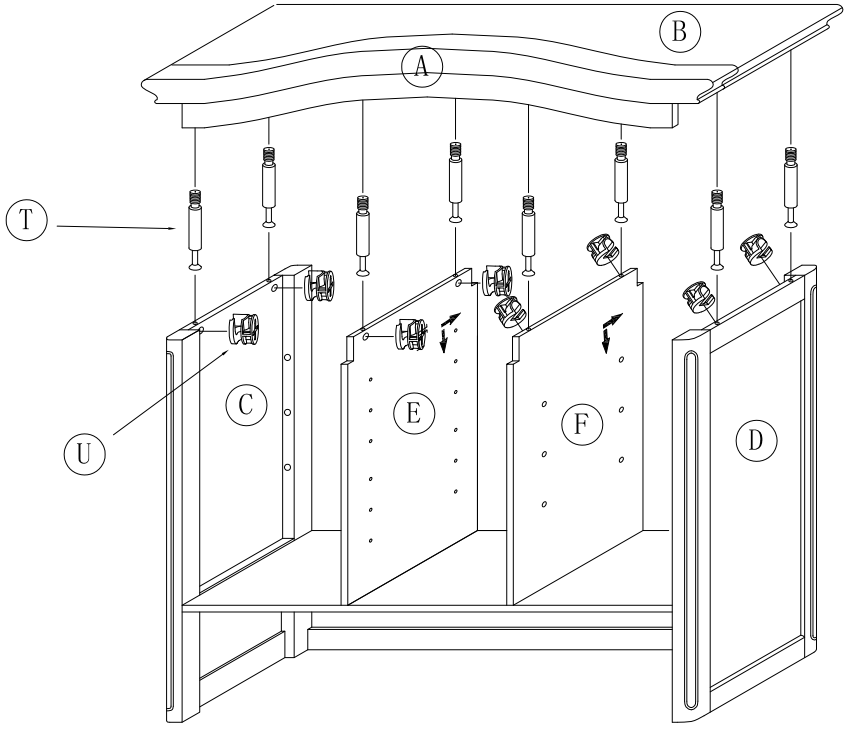

6). ASSEMBLE THE TOP PANEL(B).

- ROTATE THE 8 CAM-BOLTS(T) INTO THE HOLES IN THE TOP PANEL(B).
- PLACE CAM-BOLTS(T) INTO THE HOLES IN THE PANEL(C/D/E/F) AND ATTACH USING 8 CAM-LOCKS(U).

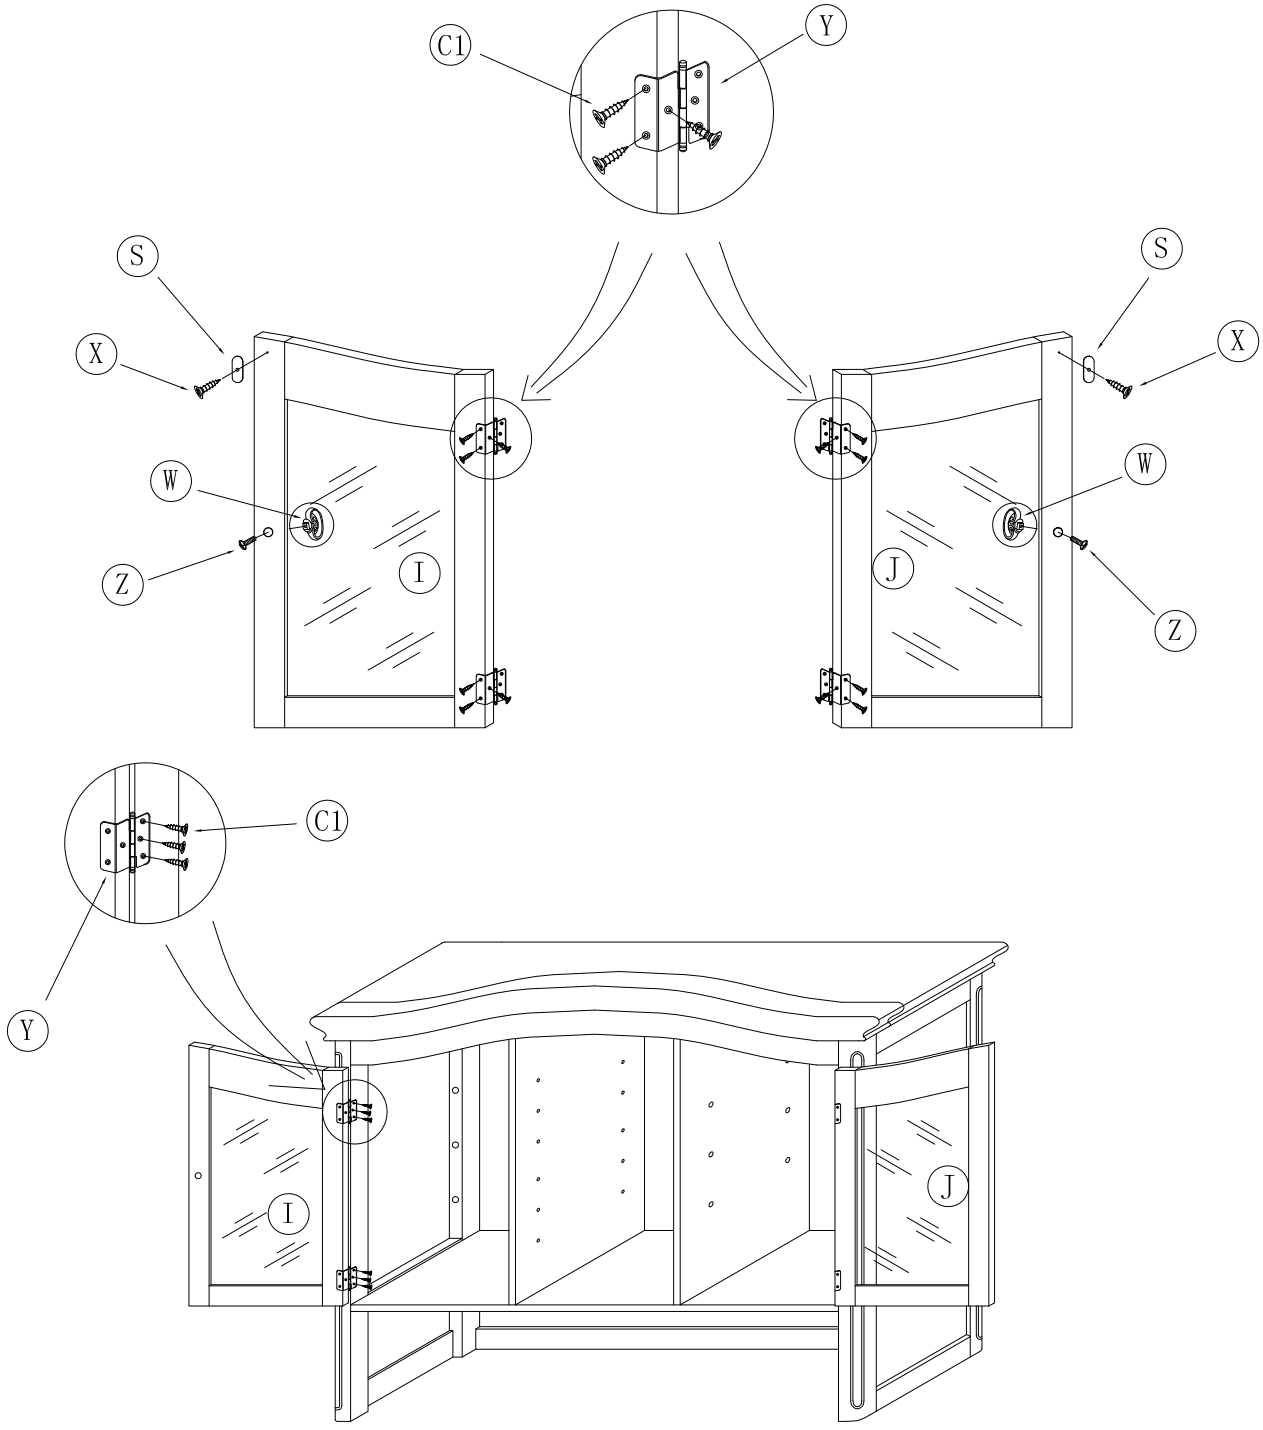

7). ASSEMBLE THE DOORS(I/J).

- ATTACH 2 HANDLES(W) TO DOORS(I/J) USING 2 SCREWS(Z).
- ATTACH 2 FEMALE MAGNETS(S) TO DOORS(I/J) USING 2 SCREWS(X).
- ATTACH 4 HINGES(Y) TO DOORS(I/J) USING 12 SCREWS(C1).
- ATTACH THE DOORS(I/J) TO SIDE PANEL(C/D) USING 12 SCREWS(C1).

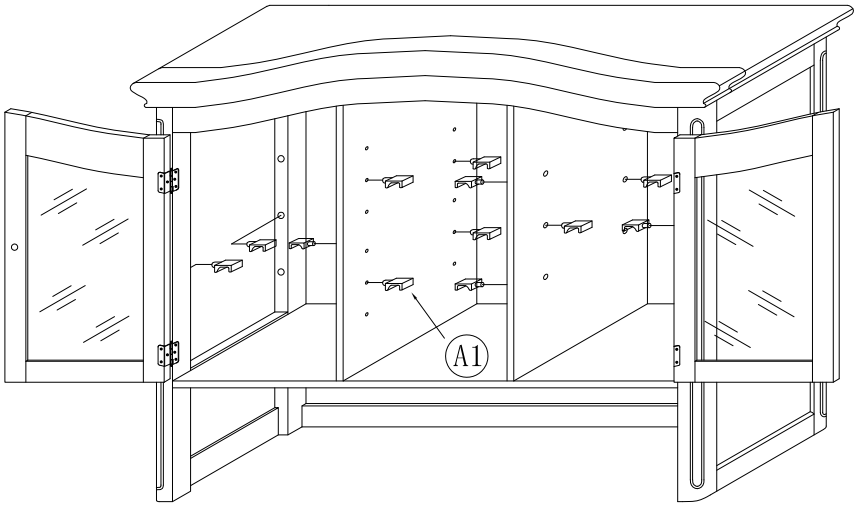

8). ASSEMBLE THE SHELF SUPPORTS(A1).

● INSERT 16 SHELF SUPPORTS(A1) INTO THE HOLES IN THE PANEL(C/D/E/F).

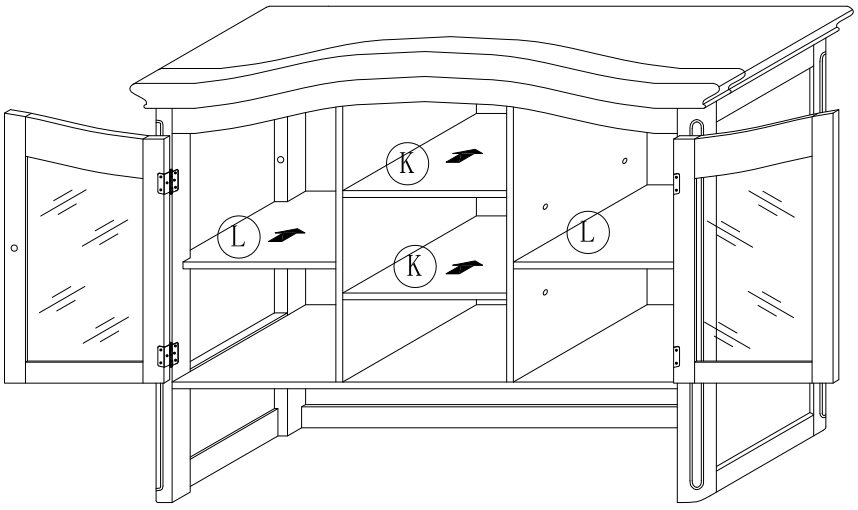

9). ASSEMBLE THE SHELVES(K/L).

● PLACE THE SHELVES(K/L) ONTO THE SHELF SUPPORTS(A1).

Warning

The anti-tip hardware must be used as part of assembly!

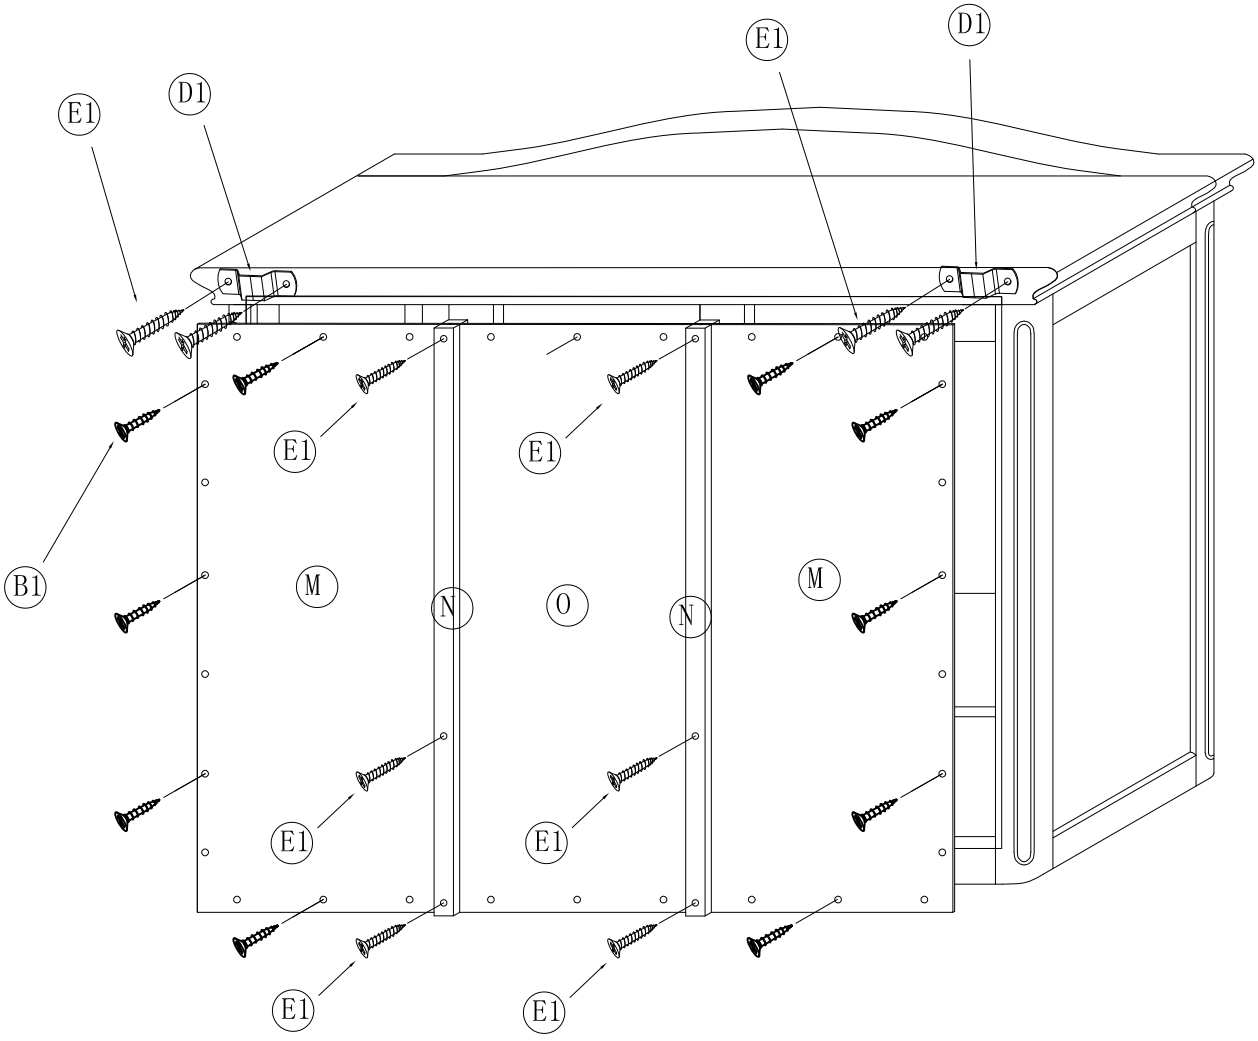

10). ASSEMBLE THE BACK PANEL(M/O).

- INSERT THE BACK PANELS(M/O) INTO THE SLOT IN THE REAR PANEL GUIDES(N).
- ATTACH THE BACK PANELS(M/O) AND REAR PANEL GUIDES(N) USING SCREWS(B1/E1).
- ATTACH 2 HOOKS(D1) USING 4 SCREWS(E1) IN THE PREDRILLED HOLES OF REAR TOP PANEL.

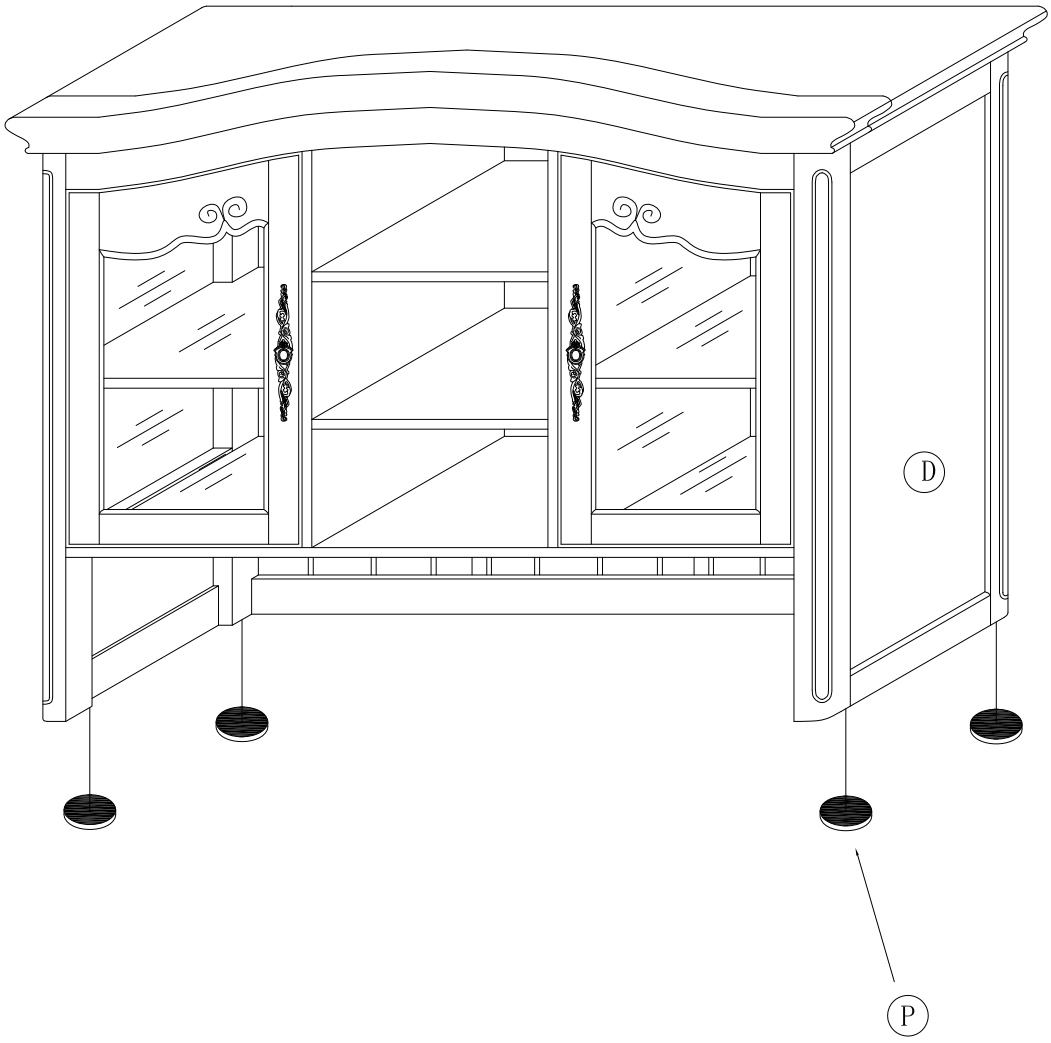

11). ASSEMBLE THE EVA MAT(P).

● ATTACH THE EVA MAT(P) BELOW THE SIDE PANEL(C/D).

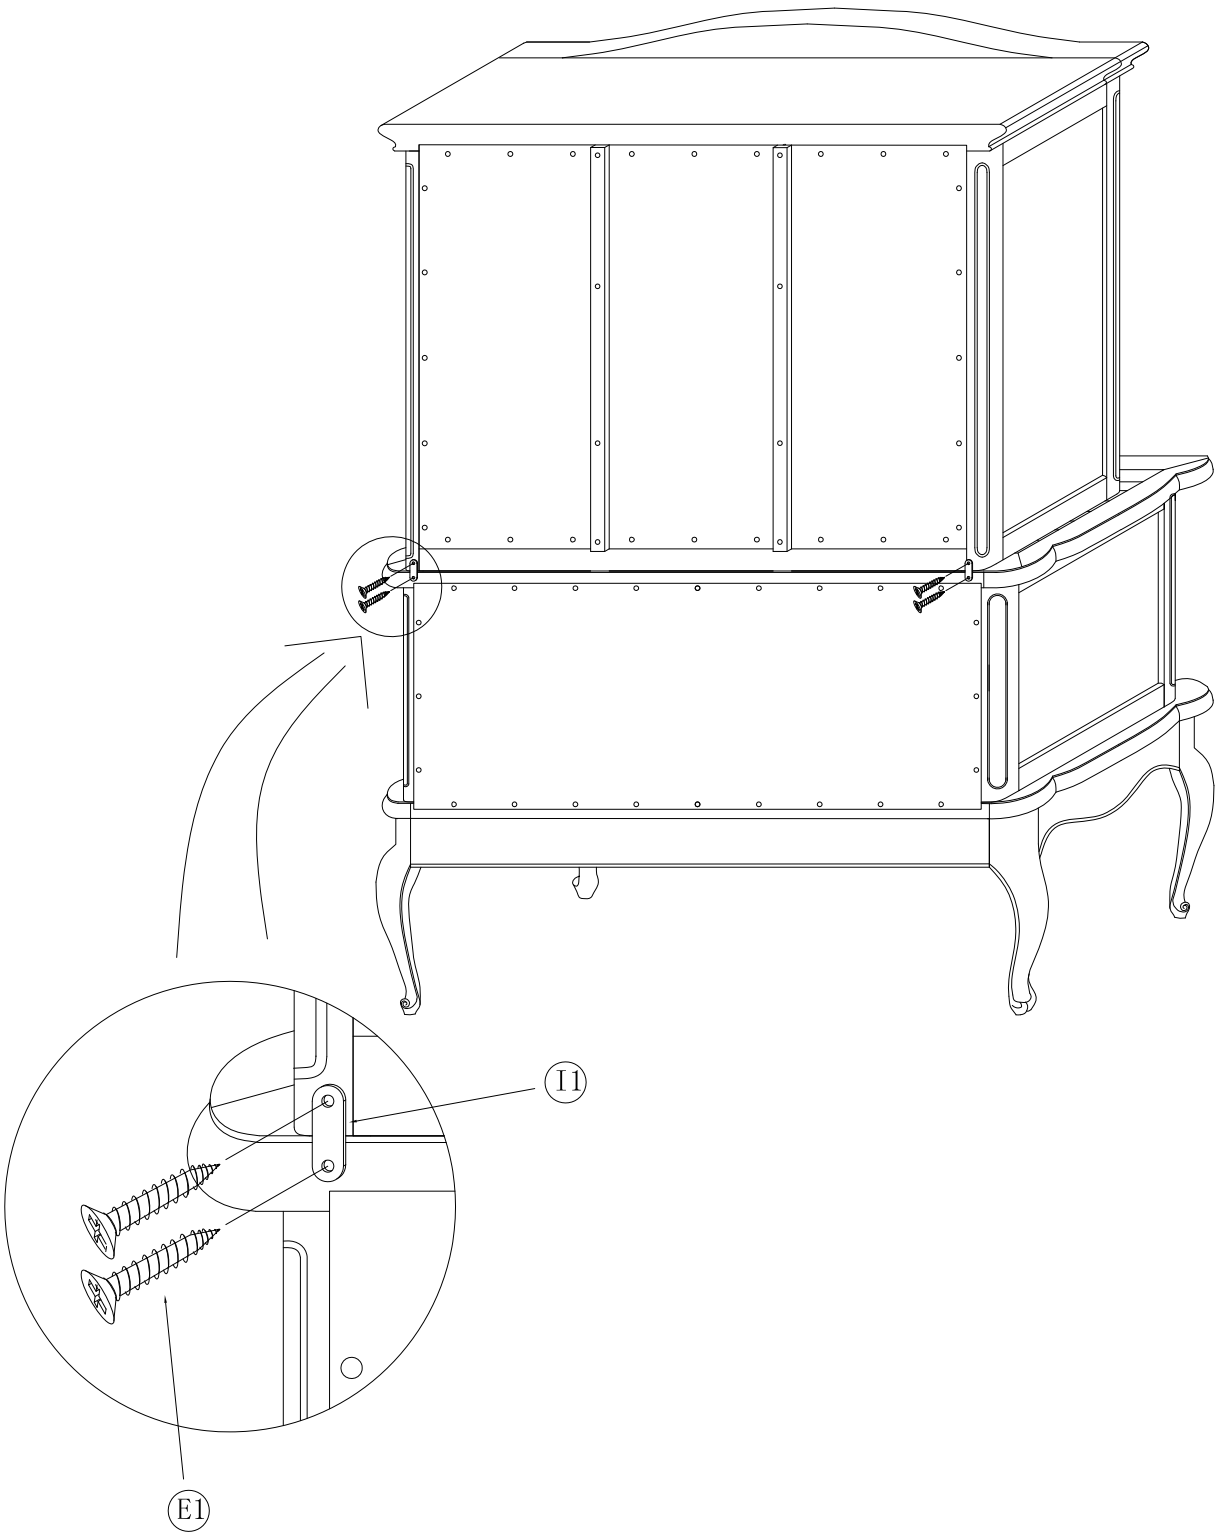

12). ASSEMBLE THE PLATES(I1).

● ATTACH THE 2 PLATES(I1) TO SIDE PANEL(C/D) USING 4 SCREWS(E1).

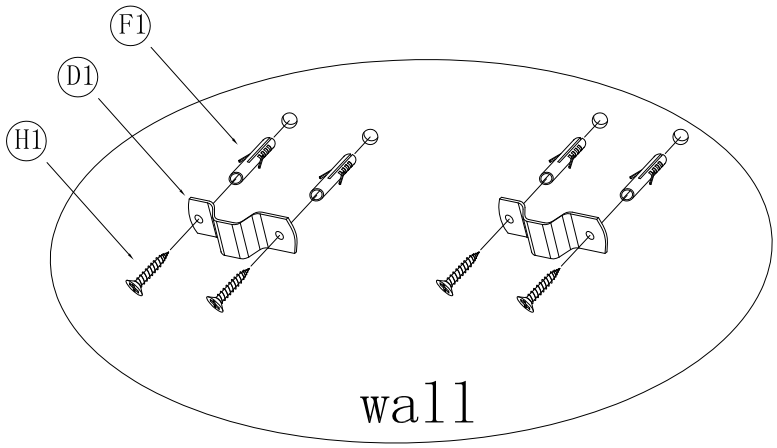

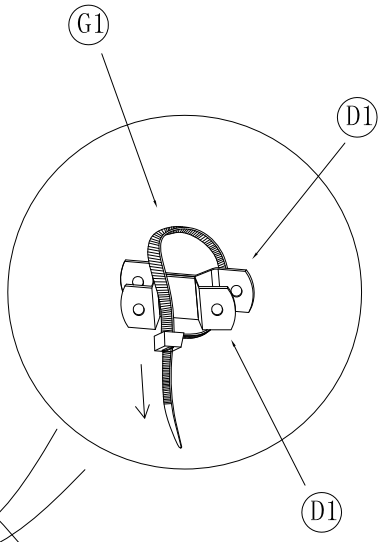

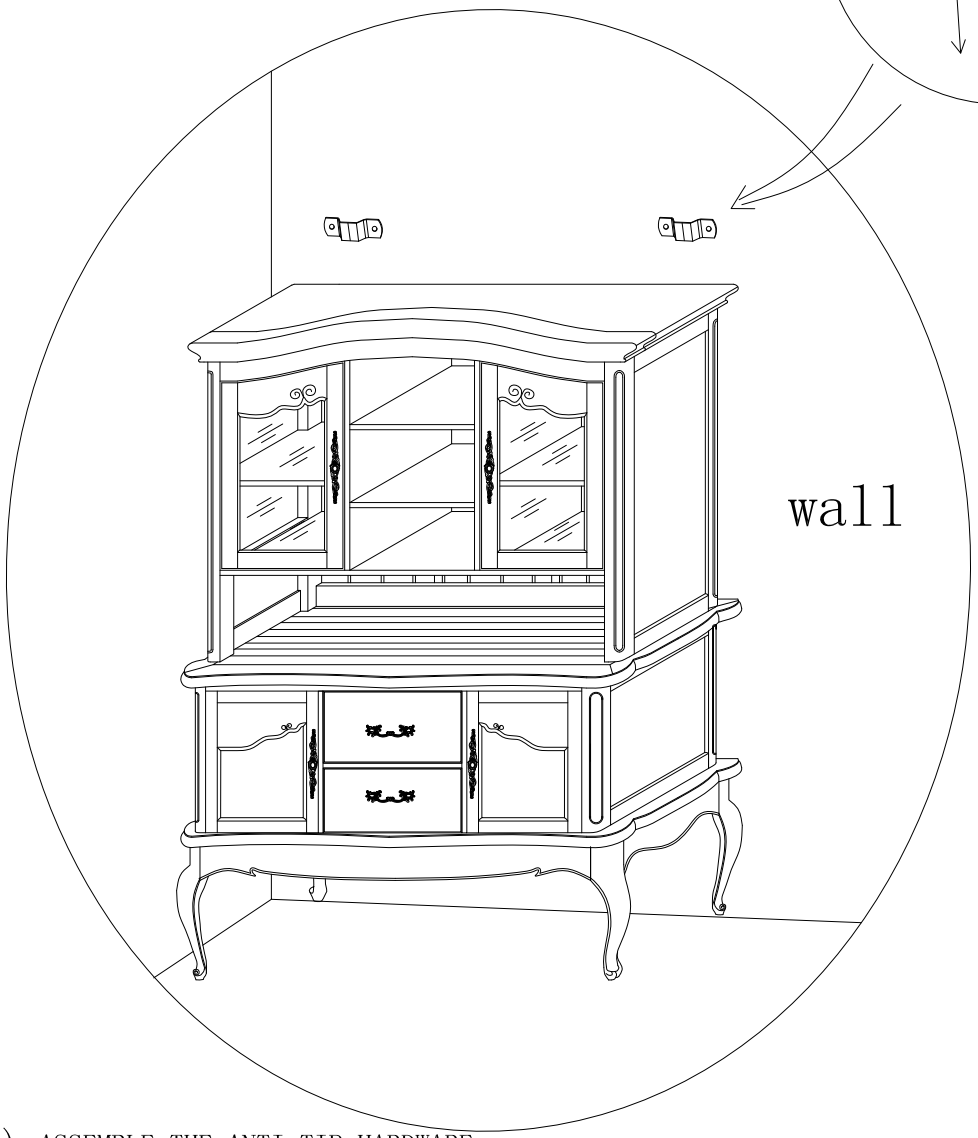

13). ASSEMBLE THE ANTI-TIP HARDWARE.

- DRILL 4 HOLES INTO WALL, PLEASE REFER TO THE REAR TOP PANEL'S HOLE DISTANCE AND HEIGHT.
- PUT 4 HANGERS(F1) INTO THE HOLES IN THE WALL, AND ROTATE 4 SCREWS(H1) INTO THE HANGERS(F1).
- CONNECT THE TWO HOOKS WITH A PLASTIC BELT.